

EAGLEFOR 8 CONVENTIONAL OR 2 BIG BALES

Owners Illustrated Instruction Book & Parts List


Grovebury Road, Leighton Buzzard, Bedfordshire. LU7 4UX. UK. Tel:01525 375157. Fax:01525 385222. Email:info@brownsagricultural.co.uk


INTRODUCTION

The Eagle bale grab is a heavy duty grab purpose built to withstand modern telescopic material handlers as well as conventional tractor mounted loaders. Compared to the standard flat eight grabs the Eagle is more heavy duty with longer and stronger claws. This enables the grab to handle conventional bales both length ways or side ways in packs of eight, as well as the larger high density bales in groups of two. It should be noted that in order to handle flat eights and stack them closely it means larger high density bales measuring 2.4m in length will overhang the front of the grab. The bale guide provided can be adjusted to any width to cope with the specific bales being moved and can be mounted on either side of the grab to suit the operator.


CLAW RAM BRBAKDOWN

11	91823	End Cap	. 1	
12	91824	Piston Head	1	
13	91829	Head Bush	1	
14	91830	Seal Kit	1	
15	91835	Ram Rod	î.	

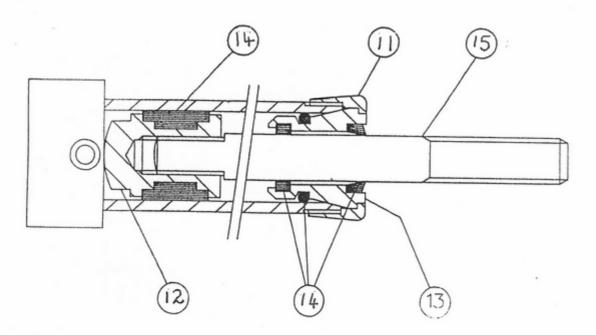

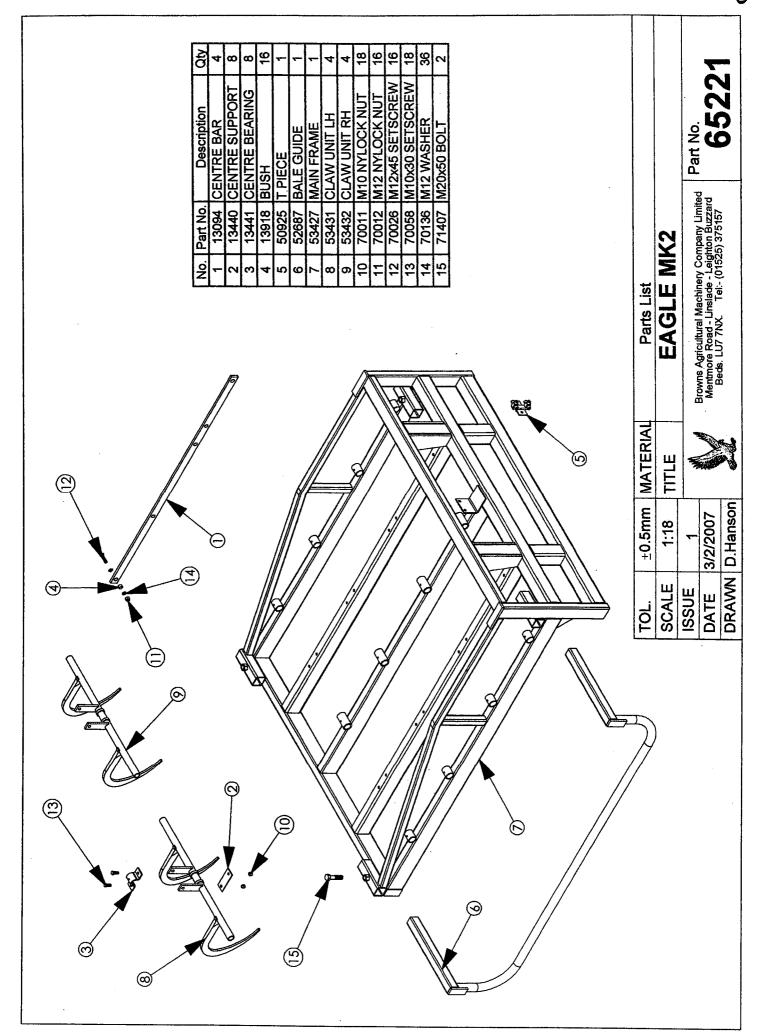

ايما	Part No.	Description	Qty
15365	5	PiN	2
52546)	RAM T PIECE	2
70033		LINCH PIN	2
70073		M20 WASHER	4
70133		COTTER PIN	4
70138		HALF NUT 7/8 UNF	2
71033		HOSE 0.5m	2
71460		RAM	2
71896		HOSE 0.7m	2
	ı		

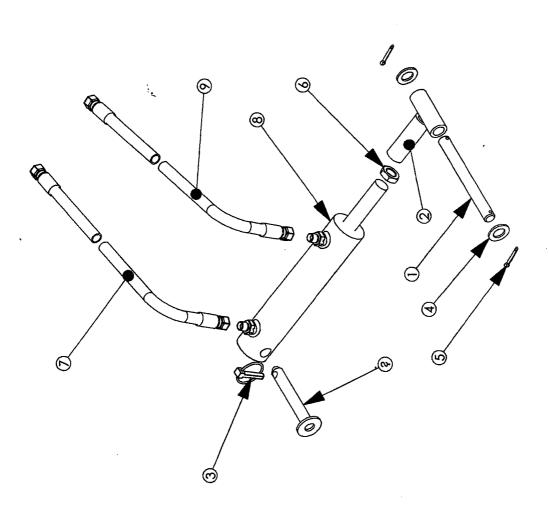


	TITLE	SCALE 1:2 TITLE ISSUE 1 DATE 3/2/2007 DRAWN D.Hanson
--	-------	--

Part No.

ASSEMBLY

List

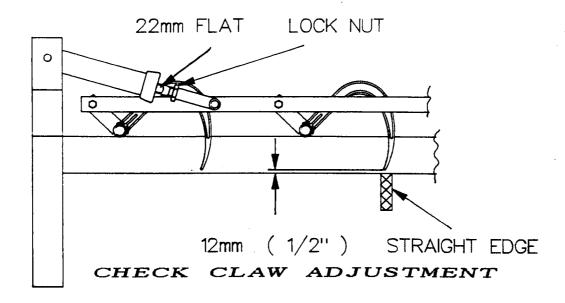

- Fully retract Claw Ram. 1
- 2 Place a straight edge under frame as shown and check clearance.
- 3 To adjust clearance, release Lock Nut, turn Ram Rod by flats shown in the appropriate direction to give measurement shown, tighten Lock Nut.

*****NOTE****

ON NO ACCOUNT MUST THE CLAWS PROJECT BELOW THE FRAME WHEN THE CLAW RAM IS FULLY RETRACTED OR CLAW DAMAGE MAY RESULT.

WARNINGS

- 1 Allow only qualified persons to operate the Loader.
- 2 Never allow anyone on the Loader and/or the attachments when in operation.
- 3 Operate the tractor at reduced speed, especially when making a
- 4 Always allow for added length of Loader when making turns.
- 5 In transit keep Loader in lowest position possible.
- 6 Exercise extreme caution on inclines, irregular or uneven
- 7 Avoid lowering a heavy load and stopping suddenly.
- 8
- Do not walk or work under raised load or attachment. Never leave loader or attachment in raised position unattended. 9
- Ensure that the Claw Ram is fully retracted after each operation 10 to eliminate damage to claws.
- Check tightness of all bolts periodically. Oil all moving parts 11 regularly.
- Do not leave Ram extended when not in use as this can cause 12 damage to the rods.
- 13 Do not use the Buzzard frame as a crane jib.
- 14 Note - Extra supports not supplied by Browns may be required when welding Quick Detach Brackets to the Buzzard Rear Frame. Also make sure both box sections are tied together using heavy plate.



EC DECLARATION OF CONFORMITY

Manufacturer : Browns Agricultural Machinery Co. Ltd.

Description of Machinery : Eagle Heavy Duty Grab

Model Number : 65221

This machine complies with EC Directives, Transposed Harmonised Standards, National Standards and Technical Specifications as follows:

89/392/EEC 91/386/EEC 93/44/EEC 93/68/EEC EN 292 pr EN 691

The machinery has been designed taking into account the essential Health & Safety Standards as detailed in the Supply of Machinery (Safety Regulations) 1992.

For and on behalf of the Manufacturer

Name : J. W. G. BROWN

Status : MANAGING DIRECTOR

The above machinery taking into account the state of art, complies with or is designed and constructed so far as possible, to comply with the relevant Health & Safety requirements as indicated in the Technical file.

THE COMPANY IS CONTINUALLY STRIVING TO IMPROVE ITS PRODUCTS AND RESERVES THE RIGHT TO MAKE IMPROVEMENTS OR CHANGES WITHOUT INCURRING ANY OBLIGATION TO ALTER ANY OF ITS MACHINES PREVIOUSLY SOLD.